

INSTRUCTIONS FOR CARE AND MAINTENANCE REMOVABLE SEAT PEDESTALS

The seat pedestals furnished by Springfield Marine Company are designed to provide years of trouble-free, maintenance-free use. Because of these designs, there are no periodic maintenance requirements, other than making sure they don't get excessively dirty.

In order to insure that your time on the water is worry-free, we do recommend the following inspections prior to each use.

1. Check to ensure that there is no contamination or foreign debris that may restrict the post's installation or operation. This includes lubrication of any kind.
2. For pedestals equipped with a locking handle: Ensure that the lock handle properly engages and disengages the locking pin, and that the pin operates freely and keeps the seat mount in place when locked.
3. For pedestals equipped with an unintentional detachment feature check to ensure that those features are operating effectively. Check lock pin to ensure that it is securely locking into place. Check unintentional detachment clips or rings to ensure they are not loose, damaged, or missing.

The instructions cover the following removable pedestal systems:

Kingpin
Taper-Lock
Plug-In
Spring-Lock
EXT (Extreme)
Clip-Lock
Thread-Lock
Stowable Table Posts

If parts are required, they may be ordered from the boat manufacturer, or your favorite dealer.

